

DATA SHEET

NEWTON 803 NEWTONITE

Damp-proofing Membrane & Plaster Base

Rev 4.0 - 10 November 2010

INTRODUCTION

Newton 803 Newtonite is a composite membrane comprising of a high density polyethylene membrane with a rot-proof polythene mesh heat welded during the manufacturing process to the surface of one side.

The meshed surface creates a mechanical key to allow the membrane to be plastered, rendered or to receive dot & dab plasterboard.

803 Newtonite is a damp-proofing membrane suitable for use internally to above ground walls and is one of a range of membranes within the Newton System 800 series of damp proofing products. If the meshed surface is not required because the wall finish will be a block wall or timber or metal frame, use Newton 803 instead.

803 Newtonite can be used on virtually any type of surface of a thickness and strength sufficient to support the material and final finish. 803 Newtonite provides a firm key, an effective barrier where direct bonding is not possible because the surface has been affected by damp, salts, oils (or other injurious substances) or simply where the surface has deteriorated and crumbled. 803 Newtonite will also has low thermal conductivity and will lower the risk of surface condensation.



JN
JOHN NEWTON
& COMPANY LIMITED (EST. 1848)

PRODUCT CODE - M16

NEWTON 803 NEWTONITE	
Width (m)	1.00
Length (m)	10.00
Area (m ²)	10.00
Weight (kg)	6.20
Colour	Blue
Raw material	High Density Polyethylene
Thickness (mm)	0.50
Stud height (mm)	5.00
Vapour permeability	0.046g/m ² x hr x mmHg
Thermal resistance	0.078m ² K/W
Thermal conductivity	0.461 W/m K
Air volume between studs	1.56 litres/m ²
Vicat softening temperature	126 °C

All technical data stated herein is based on tests carried out under laboratory conditions.

KEY BENEFITS

- Provides a surface that is totally separated and unaffected by the dampness within the wall ensuring that the wall finish will never be affected by moisture or salts
- Positive internal air pressure 'pushes' vapour, suspended within the air gap created by the studded membrane, through the external wall and out of the property.
- Superb 'key' for renders or plasters
- No need to use injected damp-proof courses which unnecessarily pump chemicals into the property
- Moisture resistant but allows vapour diffusion
- Quick and easy to install
- In many cases, the existing render can be left on the wall
- No requirement for damaging preparation to the wall surface


803 Newtonite is light, clean and easy to handle. It can be cut with a sharp knife, scissors or shears. The membrane is inert and is highly resistant to water, alkalies, saline solutions and organic acids, and it is not affected by minerals. It is also resistant to bacteria, fungi and other small organisms.

Newton 803 Newtonite is guaranteed against deterioration for 30 years, has a life expectancy of at least 50 years and is supported by BBA Certification Certificate Number 94/3010.

John Newton & Company was formed in 1848 and were the first British company to produce a meshed membrane. We are recognised as the leading supplier of damp proofing membranes in the UK. Newton 803 Newtonite can be purchased directly from John Newton or from leading builders merchants.

TYPICAL APPLICATIONS

- As a damp-proof base for renders, plasters or dot & dab plasterboard
- As a damp-proofing system to deal with rising damp
- Quick and simple alternative to injected damp courses

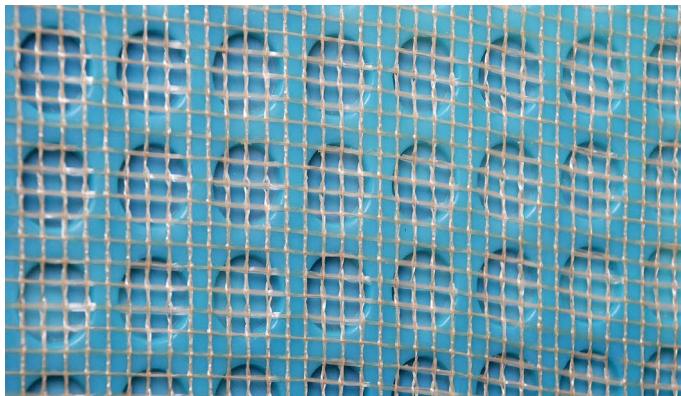

SURFACE PREPARATION

- Clean the substrate to remove all loose debris and organic matter. Plaster should be removed as it can soften over time, which will weaken the fix of the membrane to the wall. If the wall render is in good condition, it does not have to be removed and the 805 Newlath can be fitted directly over. If the render is damaged, local repairs may be required.
- Loose or crumbling render should be removed and local repairs made. If the render is in very poor condition, all of it may need to be removed.
- Obtain as flat a surface as possible. If the wall is undulating, better results are produced if the wall surface is dubbed-out flat with sand & cement prior to installation of the membrane rather than dubbing out over the top of the 803 Newtonite. A flat uniform surface to the substrate means that the plaster or render above the 803 Newtonite will be uniform also and less likely to have cracking caused by differential thicknesses.
- If evidence of bacterial growth can be seen, use a fungicidal product prior to the fitting of the membrane.
- If any evidence of wet rot or dry rot is seen, have it dealt with by a qualified remedial specialist.
- If a new slab is to be laid as part of the works, it is preferable to fit 803 Newtonite prior to the laying of the floor slab with the floor DPM extending upwards in front of the Newton 803 Newtonite ready for the concrete pour.




CUTTING TO SIZE

- 803 Newtonite can be cut with a sharp utility knife, scissors or shears.
- Decide whether the membrane is to be fitted horizontally or vertically.

FIXING TO THE WALL

- Cut the membrane to size. Ideally, 803 Newlath should be continued down past the slab to the oversite. If this is not possible, cut the membrane so that it finishes tightly to the soffit and floor finish. A gap is not required at the floor, indeed the system works more efficiently when the system is not ventilated as this impedes the natural vapour drive from inside the property to the outside that still continues through the Newton 803 Newtonite.
- 803 Newtonite is fitted to the wall with the studs to the wall and the flat meshed surface facing inwards towards the applicator. Fix the membrane to the wall with the Newtonite Plug to all substrates except to slightly friable mortar substrate, when the Newton 800 Cob Plug should be used.
- 805 Newlath is fitted horizontally. Fit the membrane as level as possible - best results are achieved when a long builders level or a rotating laser level is used. Care must be taken to ensure that the 803 Newtonite is pulled tight and square while fixing as this will avoid sagging or bulging which can cause problems when plastering or rendering.
- Using a 7 or 8mm drill bit (depending on substrate), drill through the membrane into the wall to a depth of at least 50mm.

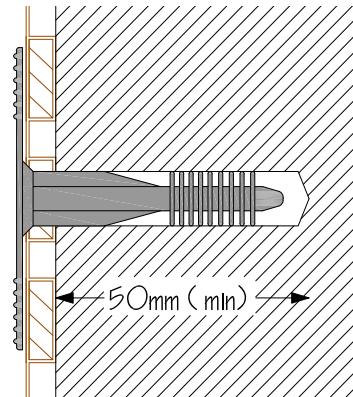

- Apply a bead of mastic around the hole to the membrane so that when the plug is hammered home, the mastic will seal between the plug and the membrane and so prevent migration of dampness and salting from the substrate to the wall finish.
- Use a small number of fixings to initially fit the membrane to the wall as level as possible.
- Once the section of membrane is on the wall add the further fixings.
- Hammer the plugs home using a wide headed hammer such as a lump hammer or mallet.

- A smaller-diameter bit can be used on softer substrate to ensure a tight fit for the plug.
- Fixing centres must not be greater than 250mm.
- On curved or uneven surfaces, closer fixings should be used.
- Fit 803 Newtonite 300mm to return walls to isolate wall finishes from dampness transmitting from the main wall being treated.
- 803 Newtonite can be taken into reveals.
- Fixing should not take place above 30 °C and below -5 °C.



MEMBRANE JOINTING

- Position fixings close to the edge of all joints to reduce the risk of shrinkage cracks.
- Joints are created by but jointing the two edges together and then oversealing the joints with Newton Mesh Tape.
- 803 Newtonite can be taken round corners. On particularly difficult shaped corners, cut the 803 Newtonite and butt joint and seal as above.
- Newton Mesh Tape should be firmly pressed into the mesh of the 803 Newtonite to facilitate the joint. In cold and damp conditions a heat gun should be used to gently evaporate surface moisture and then to assist in pressing the Mesh Tape into the mesh of the membrane.

SEALING AROUND PROTRUSIONS

Where the membrane has to be cut around pipes or other protrusions, carefully cut the membrane around the protrusion and then seal around the protrusion with Newton Mastic to ensure there is no bridging between the damp substrate and the new finish.

PUNCTURING THE MEMBRANE

If the finished wall is punctured when holes are drilled to fix brackets, etc., Newton Mastic should be inserted before fixing bolts are inserted to ensure no bridging from the damp substrate occurs.

FINISHING PROFILE

- It is recommended that renders and plasters are raised from the floor by 20-25mm to prevent bridging from the floor. 800 Finishing Profile, available in 2 metre lengths, should be fitted to the bottom of the 803 Newtonite as a plaster stop, guaranteeing that the plaster/render will stop short of the floor.
- 800 Profile must be fixed at the same time as 803 Newtonite and therefore before the plaster or render is applied.
- 800 Profile is not recommended where the run of wall is uneven or when the membrane is extended down past the slab. Once the finish has been applied and has dried, the 20-25mm gap to the bottom of the plaster/render should be covered by a timber skirting.



FINISH (GENERAL)

- 803 Newtonite is suitable for internal use only. The wall finish can be plaster, render, hydraulic lime or plasterboard bonded to the membrane with a proprietary adhesive compound.
- Externally the wall finish can be render or hydraulic lime.
- Whilst any cement rendering is prone to cracking, careful application can reduce or avoid this.
- Problems occur when the scratch coat has not been allowed to fully cure prior to the float coat being applied, but the most common problem we see is where the render has not been allowed to fully cure due to accelerated drying. It is extremely important that the render is slowly cured for a period of 7-10 days, longer if possible. The render gets its strength from the chemical processes that take place between the cement content and the added water. The cement needs the correct amount of water to be available to it during the whole of the curing period. If the render dries too quickly due to exposure to sunlight, wind or even dehumidification, the cement will not be able to react with water producing a weak render that will be prone to cracking.

NEWTON 803 NEWTONITE

Damp-proofing Membrane & Plaster Base

DATA SHEET

- The render should be dampened regularly during the curing process.
- Hairline cracking can be made good with fine fillers or alternatively a high-build masonry paint can be applied.

DO NOT APPLY DECORATIONS UNTIL PLASTERS OR RENDERS ARE THOROUGHLY DRY.

PLASTERING

- The recommended plaster for 803 Newtonite is Tarmac Whitewall One Coat. **Please note that we do not recommend that this product is used in one single coat to Newton Mesh membranes.**
- The application of the plaster should be in two coats: 6mm scratch coat, 6mm second or float coat.
- If a finish coat is required this should be of 3mm.
- Tarmac Whitewall should be applied in accordance with good plastering practice as described in BS 8481 : 2006, BS EN 13914-2 : 2005.
- Always allow 24 hours drying time between coats of plaster. For a high impact resistant finish, use Whitewall High Impact Backing Plaster.
- **NOTE: Tarmac Whitewall and Tarmac Whitewall High Impact Backing Plaster are not suitable for areas of high humidity and wet areas such as swimming pool surrounds.**



RENDERING

- Render with a mix of sand, cement and lime should be applied in two coats using the procedures defined within BS EN 13914-1 :2005 to a total thickness of 14mm.
- A 3mm skim coat of finishing plaster can be added once the render is fully cured.
- The scratch coat should be a mix of 1 part lime: 1 part cement: 5 parts clean well-graded sharp sand and the second or float coat should be a mix of 1 part lime: 1 part cement: 6 parts clean well-graded sharp sand. The scratch coat should be 7mm and the second or float coat should be 7mm.

- To lessen incidence of cracking, it is best to mix the lime and sand a day or more before use. Cement can then be added at the time of rendering.
- The work should be of two coats of render and if required, a third coat of finishing plaster. The purpose of the 7mm scratch coat is to stiffen up the lath and to provide rough and absorbent, backing for subsequent coats.
- Work this scratch coat well into the mesh.
- Each 7mm coat of render should be allowed to dry for a period of not less than seven, preferably ten days, longer if possible. Cracking may occur if shorter time is allowed between coats.
- It is important that the render coats are allowed to cure correctly over the 7 to 10 day period with the render dampened as required. If the scratch coat has not fully cured, slumping of the render can result.
- Before applying the second or float coat, carefully drill or scratch out a small area into an area behind the mesh, within the membrane stud, to confirm that it is fully cured. The surface will cure quite quickly but the area behind the mesh must be fully cured also.
- In warm periods the render should be protected from excessive drying out by covering with damp hessian sheets with plastic sheeting over.
- Dampened down the scratch coat before application of the float coat.
- A smooth finish is not recommended.
- Expansion joints should be trowelled in through the render to the membrane. These joints must be filled with a suitable flexible polymer-based sealant.
- Expanded metal angle beads and stop beads can be fixed where appropriate using dabs of the same material mixed as for the scratch coat.

HYDRAULIC LIME

- NHL (Natural Hydraulic Lime) 3.5 should be used to a combined depth of 20mm with a 10mm scratch coat and a 10mm second or float coat.
- The mix ratio is 2.5 parts sand to 1 part NHL 3.5 mixed as per manufacturers instructions.
- The 10mm scratch coat is pushed firmly into the membrane mesh.
- Check the application the day after and rub out any cracks.
- The surface should be thoroughly scratched without breaking the surface of the mesh.
- The scratch coat has to be left for a minimum of 7 days to set. It should be protected from draughts and extremes of temperature.
- Before applying the second or float coat, carefully drill or scratch out a small area into an area behind the mesh, within the membrane stud, to confirm that it is set and reasonably hard. The surface will cure quite quickly but the area behind the mesh that has to be set.

PLASTERBOARD ON DABS

Plaster board panels can be fixed to 803 Newtonite by the dot and dab method, giving a dry surface ready for immediate decoration.

'Dabs' should be applied to the heads of the Newtonite Plugs, board edges and membrane to cover 50% of the 803 Newtonite

DO NOT APPLY DECORATIONS UNTIL PLASTERS OR RENDERS ARE THOROUGHLY DRY.



LIMITATIONS

- Newton 803 Newtonite is a damp-proofing product for use to above ground (non earth retaining) structures only. If the wall(s) to be treated have earth to the other side this product is not suitable and our System 500 waterproofing products should be used instead.
- Not UV stable - Ensure the membrane is rendered within 7 days of external application.

PACKAGING

1.0m x 10m - Product code M16

COVERAGE

9 to 10m² depending on number of laps

Tarmac Whitewall: 1.7m² per 25kg bag

3.5 NHL mixed with sand at 1:2.5: 3.5m² 25kg bag

STORAGE

Newton 803 Newtonite should be stored with the rolls standing up on end and away from direct sunlight

HEALTH & SAFETY

Product should only be used as directed. Although the 803 Newtonite poses no health hazards usual protective clothing and goggles should be worn in accordance with current health and safety regulations.

We always recommend that the Material Safety Data Sheet (MSDS) is carefully read prior to application of the material.

Our recommendations for protective equipment should be strictly adhered to for your personal protection. The MSDS is available upon request from John Newton or online via our web site. Please see contact details below.

Newton 803 Newtonite, 800 Profile, Newton Mastic, Newton Mesh Tape, Newtonite Plugs and 800 Cob Plugs are available from John Newton & Co Ltd, and from good builders merchants.

Technical staff will be pleased to give help and advice on the most effective use of the product.